Digital Door Lock - How to Change the Code (M-Series)

U KEY



NOTE: Never oil lock or remove silver screws. This will void warranty!

Failure to follow the instructions could result in damage to your lock, so please read carefully.

- 1. Hold the outside body in the horizontal position. Remove the 2 red screws with a #2 screwdriver. Carefully remove the plate, as there are many springs attached to it.
- 2. Important: You must turn the knob to the clear position and hold in that position until you have completed the code change. By not holding the knob in the clear position, you could damage the lock and void the warranty.
- 3. There are BLUE (non-code) and RED (code) tumblers. Your code is made up of red tumblers always prefixed by turning the knob to clear.

While continuing to hold the knob in clear position, use tweezers to lift out code/non-code tumblers you wish to change.

Important: Hold knob in clear position, right or left, while changing code.

 
4. Replacing code and non-code tumblers.

While holding knob in clear position, make sure the blue or red colored end of the tumbler is facing upwards. Make sure notch is facing proper direction. See Fig. 3.

IMPORTANT: It is imperative that the tumblers are inserted with the red or blue color side up and knob is turned in the clear position.

Using the tumblers provided, you can change your code from a 2-digit code to a 5-digit code.

If more red or blue tumblers are needed, you can request a tumbler kit by sending \$4.00 to Lockey Systems, PO Box 543, Mt. Pleasant, MI 48804. You will be sent 2 Red and 4 Blue tumblers.



To **decrease** the code, remove red tumblers and replace with blue tumblers.

5. When you have completed changing the code, carefully replace cover, making sure all springs are in place. Replace 2 red screws. Turn knob to clear and test code.

Always test your new code before installing and always test on door before locking!

