1812 HEATER KIT

This kit is designed for the 1812 model telephone intercom system. For climates where temperatures routinely drop below 40°F (4°C). An automatic thermostat will control temperature inside the housing. Do not share heater kit power and 1812 main power. They must be kept separated. **Kit Includes:** Heater assembly in mounting bracket with thermostat. (2) two magnets to mount heater. (2) wire nuts. 12 VAC 20 VA transformer. Ind_{oor} Use output: ONLY Wire Run 14 AWG - 1000 Ft 16 AWG - 200 Ft 18 AWG - 100 Ft Polarity does not matter. **Installation** Disconnect power to 1812. 0 **2 Carefully** disconnect keypad and terminal connectors 0 from main board. Remove main circuit board with 4 screws. (9) 3 Position thermostat under main circuit board. Run wires out of the back of the 1812 housing. Reinstall circuit board. 4 Mount heater assembly in position shown with 2 magnets. Make sure heater does not touch circuit board. DOORKING®, INC.

120 Glasgow Avenue