




Instructions for LED Retrofit Kits

- The 1804-700 through 1804-707 LED retrofit kits are designed to replace the incandescent light assemblies on various model DoorKing telephone entry and access control devices.
- Remove the old incandescent light assembly and replace with the LED assembly.
- Be sure you have the correct part number LED kit. Check the reference chart below.

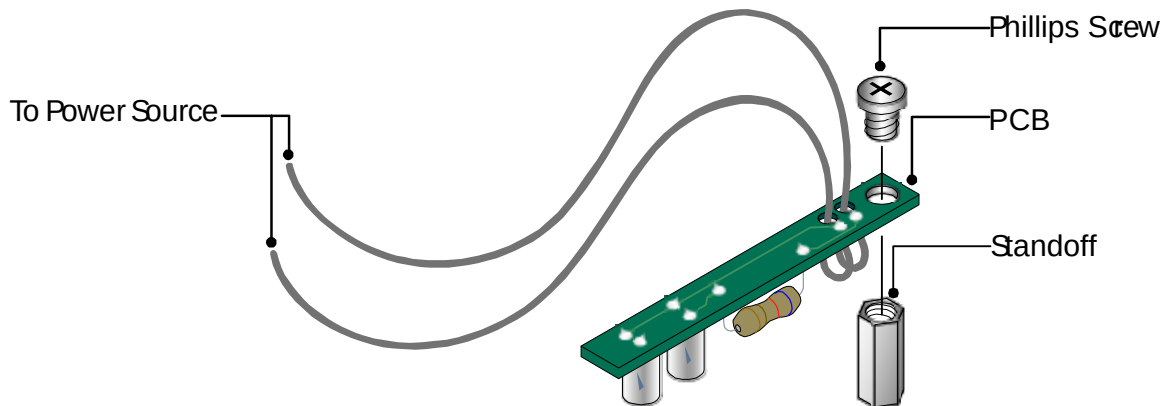

LED Kit	Use on Model(s)
1804-700	1810 Surface Mount Only
1804-701	1802, 1504 (w/1506 keypad), 1506, 1209
1804-702	1808 All, 1814 All, 1815 All, 1817 surface mount only, 1834 All, 1835 All, 1837 surface mount only
1804-703	1710 All
1804-704	1812 All
1804-705	1520 and all lighted card readers
1804-706	1503 Lighted, 1504 (w/1503 keypad)
1804-707	1810 Flush Mount Only