


Programming Instructions For *NICE* Transmitters (Remotes)


- Step 1)** Press and release the Yellow Learn Button on the receiver inside the Apollo Box (*see Figure 1*).
The RED Light next to the Learn Button will turn on and stay on for 5 seconds.
- Step 2)** While the red light on the receiver is turned on, **press and hold** either button on your 2 Button Transmitter (*see Figure 2*) until the light on the Receiver turns off, then release the Transmitter Button. Wait 1 second then press and release transmitter button. The receiver light will blink 3 times indicating the Transmitter is programmed. You are finished. Repeat these steps for programming additional Transmitters.

Note: When activating a Nice transmitter that has been installed in a third party device **replace transmitter button presses with device activations**. Relay activation of the third party device should be set to five seconds for producing adequate transmission during receiver learn. For instance, if using an aftermarket keypad to fire the Nice transmitter, enter your keypad code wherever this instruction calls for a "press". *

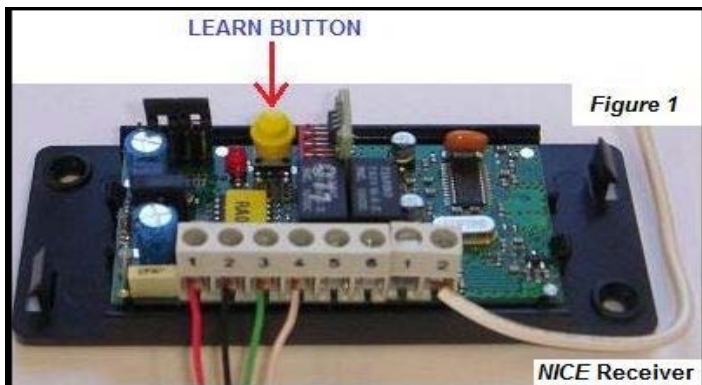

Programming and Wiring Instructions For 2nd Button Used To Control Another Gate in Close Proximity To Gate Controlled By Primary Button

- Step 1)** Program Transmitters for this gate exactly as described above.
- Step 2)** Remove the Green and White wires from terminal numbers 3 and 4 on the receiver (*see Figure 1*) and move them to terminal numbers 5 and 6 on the receiver (*see Figure 3*).

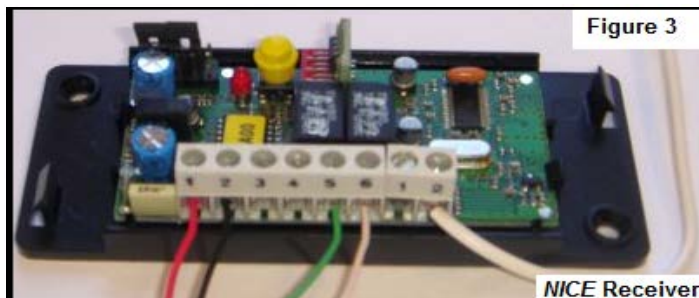

***ANY MODIFICATION OF AN FCC AUTHORIZED PRODUCT WITHOUT EXPRESSED WRITTEN CONSENT FROM THAT PRODUCT'S MANUFACTURER AND REAUTHORIZATION BY THE FCC IS ILLEGAL.**