

EAGLE CHROME ***SERIES***

RECEIVERS AND TRANSMITTERS

The CHROME series universal receivers and accompanying remotes utilize rolling code technology, providing optimum security and convenience for single-family homes, multi-unit communities and commercial buildings. This cutting edge technology comes with built-in, self-learning programming at the simple push of a button.



EG640
1 button keychain
transmitter



EG643
2 button keychain
transmitter



EG644
4 button keychain
transmitter



EG642
1 button visor
transmitter



EG646
4 button visor
transmitter

	Power	Relay	Frequency	Capacity	Encoding	Warranty
EG650	12-24 VAC or DC	1 amp	433.92	30 remotes	Rolling Code	1 year
EG652	12-24 VAC or DC	1 amp	433.92	300 remotes	Rolling Code	1 year

EG650
Eagle rolling code
universal receiver 30

EG652
Eagle rolling code
universal receiver 300



EAGLE CHROME SERIES

1 CHANNEL RECEIVER AND REMOTES USER MANUAL



EG640



EG643



EG644



EG642



EG646



EG650 & EG652

GENERAL INFORMATION


- For security, please read the instructions carefully before initial operation.
- Make sure power is off before connection.
- Do not attempt to learn a transmitter when your EAGLE operator is in use to avoid mis-operation.

TECHNICAL INFORMATION

- Working voltage: 12-24 VAC/DC
- Temperature range: -20 °C to 60 °C
- Working frequency: 433.92 MHz
- Stored transmitters: Rolling code 30-300 pieces
- Relay contact load capacity: 1A, 30V DC



Learning Button

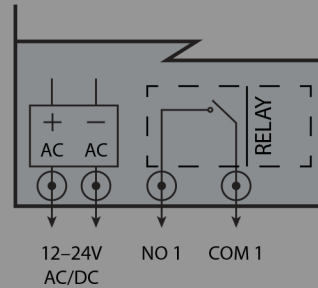

TRANSMITTER PROGRAMMING

LEARNING A TRANSMITTER

- 1 Press the learn button on the receiver and wait for the LED light to turn red.
- 2 Press any one of the transmitter buttons twice.
- 3 The LED will flicker for several seconds before turning off which will indicate that the learning process is complete and successful.

DELETING A TRANSMITTER

- 1 Press and hold the learn button on the receiver for approximately 8 seconds after the red LED light turns on.
- 2 Once the red LED light is off, release the learn button.
- 3 The LED will turn red again for 2 seconds before turning off indicating that the deleting of the transmitter is complete.

SELF-LEARNING FUNCTION

ONLY AVAILABLE FOR 2 AND 4 BUTTON TRANSMITTERS



STEP 1

Press button 1 and 2 at the same time of your existing programmed transmitter.



STEP 2

Press button 2 of that same remote. This allows the receiver to enter the learning process.



STEP 3

On your new transmitter, press the same button you want to program TWICE. Now the learning process is complete and your new transmitter is ready for use.