

Instructions for RJ71 Phone Block

Part Number 2370-010




IMPORTANT!

TIP (Positive) RING (Negative) polarity MUST be observed. TIP must be punched down on the top terminal of each pair and RING must be punched down on the bottom terminal of each pair.

Incoming Central Office
Phone Lines – 12 Max

Outgoing Phone Lines
to Apartments

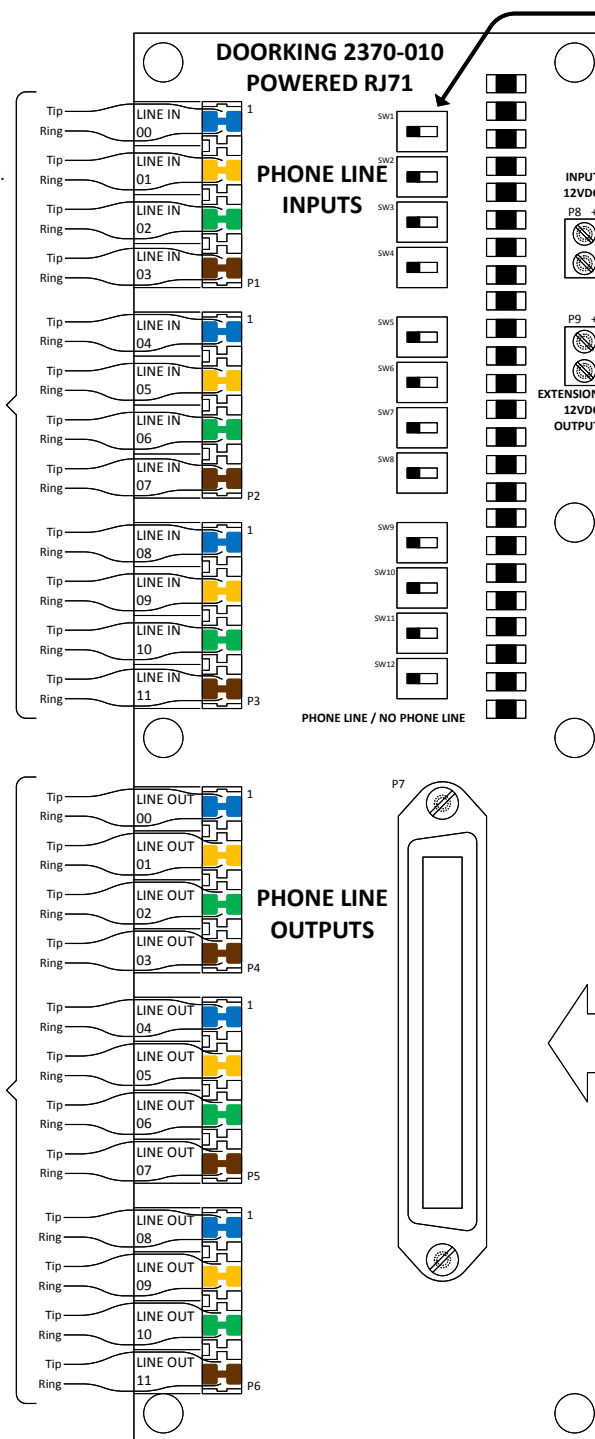

PHONE LINE/NO PHONE LINE


Set to left (Phone Line) if resident has central office phone service. Set to right (No Phone Line) if resident does not have central office phone service.


12 VDC Input Power

is used only with 1820 systems AND only if the apartment does not have central office phone service.


12 VDC Output Power

is used if additional powered RJ71s (more than 12 phone lines) are required.

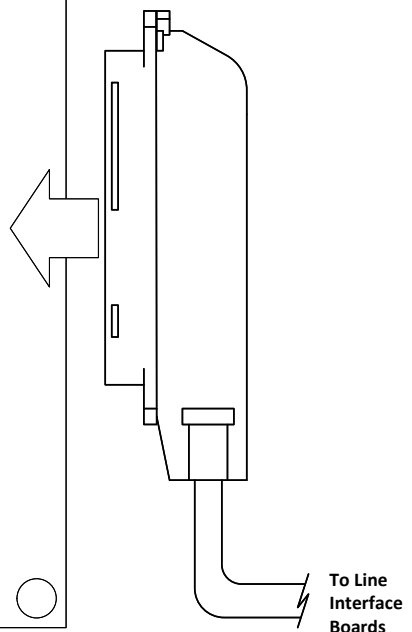

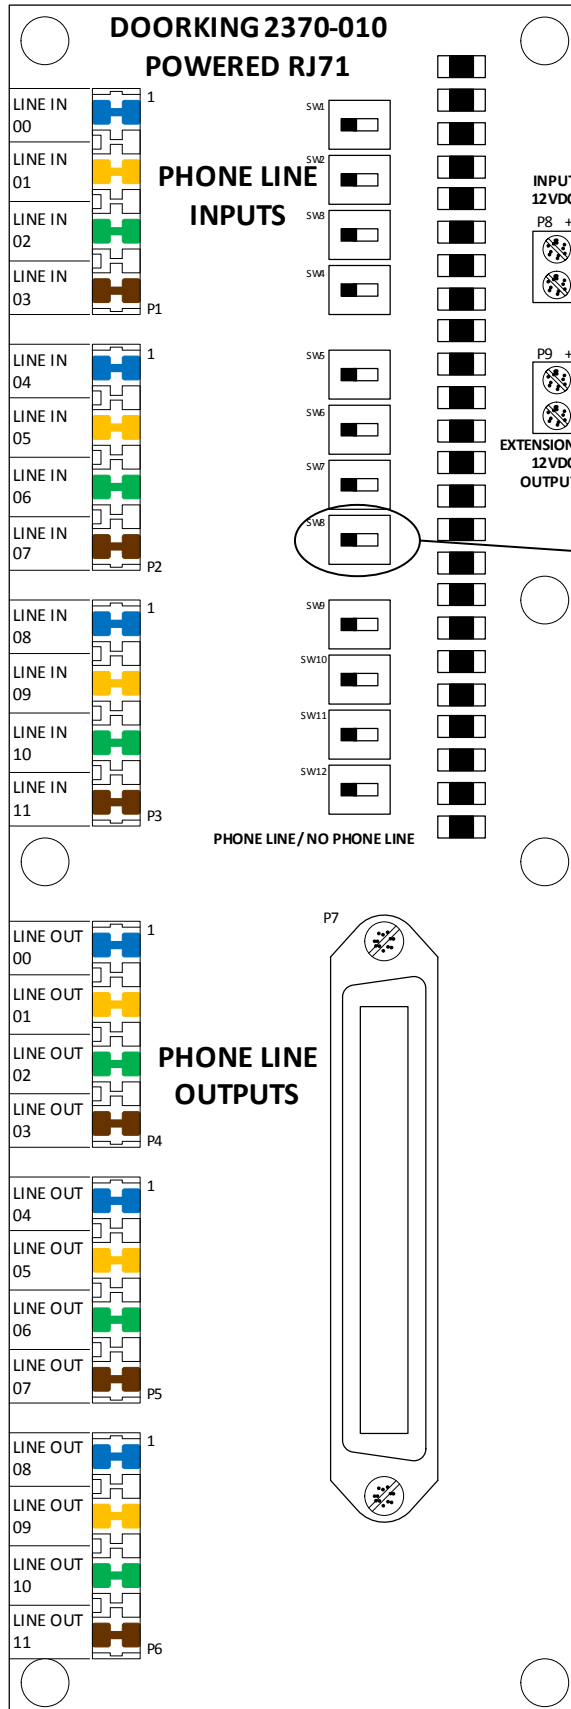

Enable Call-Down for residents without Central Office (C.O.) phone service.

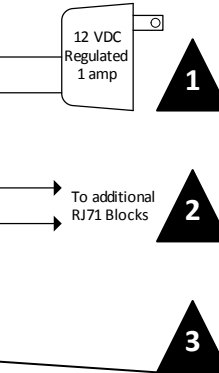

- 1** Connect a 12VDC Regulated, 1 amp power supply to terminal P8 (DK P/N 1812-020). Positive to the top terminal marked +.
- 2** Up to three (3) additional 2370-010 phone blocks can be powered from terminal P9. Note polarity!
- 3** Set the Phone Line/ No Phone Line switch to **No Phone Line** for those residents without C.O. service.