

# 1812 CCTV CAMERA KIT

DoorKing Part Number

**1812-147**

The camera (1894-040) in this kit is a high quality camera with 520 lines of resolution. Minimum illumination is required (.25 Lux). The camera automatically switches from color to black and white in low light conditions. **Not** for use in 1812 Wall Mount Models.

**Kit Includes:** Camera on mounting bracket, CCTV Circuit board, 2 plastic collars and screws, 12 VDC transformer, Plastic lens.

## Installation

### Disconnect power to 1812 !!

#### Remove 1812 circuit board (Not shown):

**CAUTION** The 1812 circuit board contains static sensitive components. Discharge any static electricity from your hands by touching a proper ground device **before** removing the circuit board.

1. Disconnect front door accessories plug, 18-pin main terminal connector and keypad plug from 1812 circuit board.
2. Remove 4 corner screws from the circuit board. Remove circuit board.
3. Run the CCTV camera RG-59U Coax and power wires to the 1812 through the existing conduit.

Discard protective cover from 3/16" hole.

Place plastic lens between mounting bracket and 1812 front door.

Key Lock

Mounting Bracket

Camera Plug

Keypad Bracket

Discard existing 2 screws.

Plastic Collar

BNC Connector


Power Terminal

CCTV Circuit Board

### Camera Plug

1. Red Wire
2. Black Wire
3. White Wire
4. Open - No Wire
5. Do Not Use Pin

## CCTV Circuit Board Connections

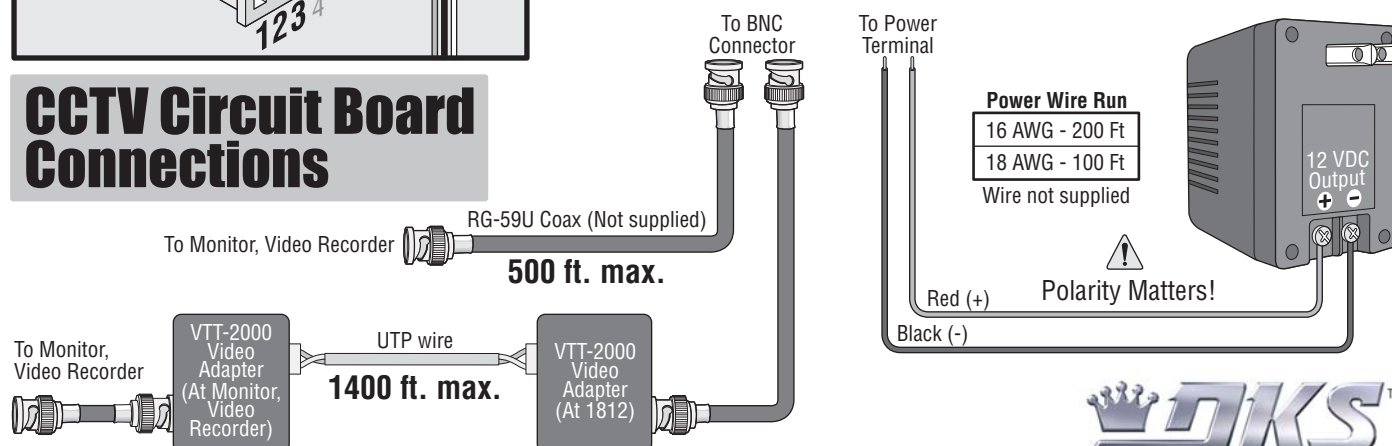

DoorKing offers video adapters (Not supplied) for up to 1400 ft using unshielded twisted pair telephone wire. (P/N 1812-039)